

Reinforced back plate for Socket 1851/1700

Assembly manual

Scope of delivery

One back plate made of anodized aluminum

Four screws with 6-32 UNC thread (replacement part no. 91315)


Compatible with

cuplex kryos NEXT for Socket 1851/1700

All air and liquid coolers that use M4 threads for installation

Installation to the motherboard

1. Remove the four screws around the CPU socket indicated by yellow arrows in the picture. Screwdriver TX20 required.
2. Remove the metal plate on the rear side of the CPU socket.
3. Position the reinforced back plate on the rear of the CPU socket. After installation, the markings on the back plate must be visible, the orientation is determined by the mounting holes. The plastic foil affixed to the reinforced back plate must touch the motherboard.
4. Screw the reinforced back plate to the CPU retention mechanism, using the screws supplied with the back plate in the positions marked in the picture. Screwdriver TX15 required.

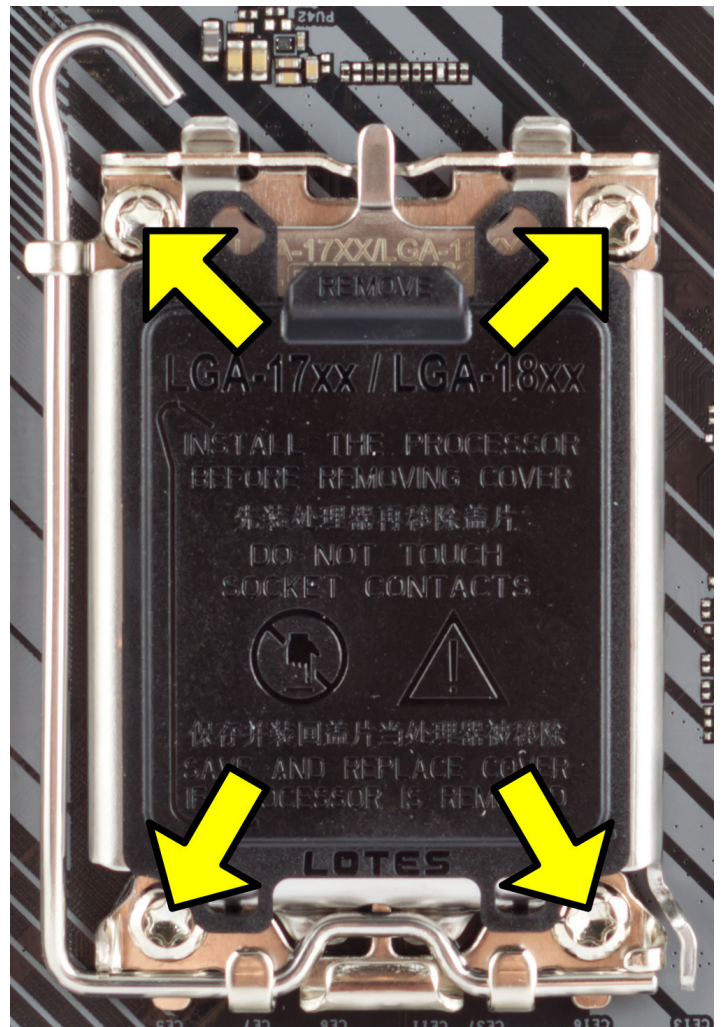

Installation of a CPU cooler

Install the CPU cooler as indicated in its installation manual, albeit without any back plate potentially supplied with the CPU cooler.