


# cuplex kryos NEXT retrofit kit assembly manual

## 1. Disassembly of the water block

1.1. Remove the four screws from the base part of the cuplex kryos NEXT (marked with "1" in the figure) and lift off the base part.

1.2. Remove the set screws accessible below the base part from the outlying threads (marked with "2" in the figure). Skip this step for acrylic and RGBpx versions of the cuplex kryos NEXT.

1.3. Pull the retention plates from the water block housing.

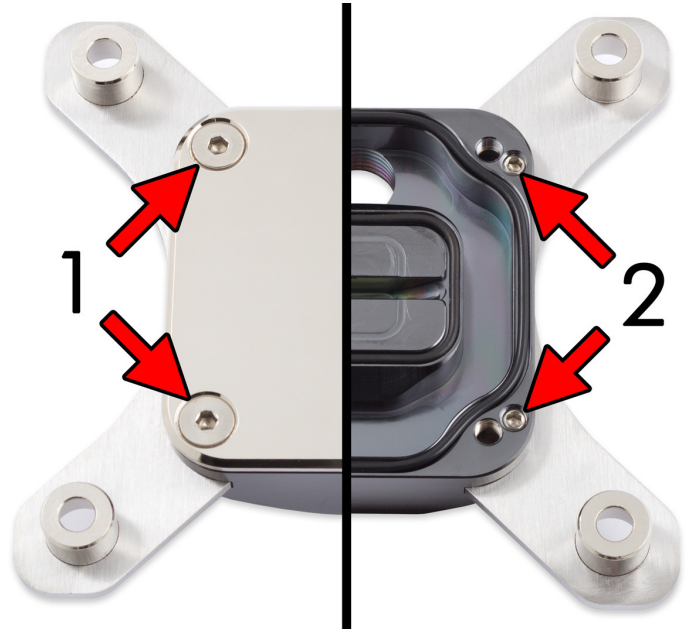

## 2. Installation of the new retention plates

2.1. Slide the new retention plates into the recesses of the water block housing.

2.2. Secure the retention plates by installing the set screws into the outlying threads of the water block housing. Skip this step for acrylic and RGBpx versions of the cuplex kryos NEXT. **Attention:** The set screws must only be slightly tightened by hand! Excessive force may warp and damage the water block housing, especially so with the acetal version!

## 3. Reinstallation of the base part

3.1. If the gaskets have been lifted off the water block housing during disassembly, insert the gaskets into the corresponding grooves of the water block housing. The gaskets must be perfectly aligned with the grooves!

3.2. Place the base part on top of the water block housing and secure it using the countersunk head screws removed in the first step. **Attention:** The set screws must only be tightened by hand without using excessive force!

For installation of the cuplex kryos NEXT on a motherboard, please refer to the corresponding manual of the water block. All installation manuals are available for download on our website [www.aqua-computer.de](http://www.aqua-computer.de) in the "Support" section.